

Product Manual

IR-232

IR to RS-232 Interface

Version 1.6 December 1, 2004



17630 Davenport Road, Suite 113 • Dallas, TX 75252
Phone: 972-931-2728 • Toll-Free: 888-972-2728 • Fax: 972-931-2765
E-Mail: Sales@crwww.com • Website: www.crwww.com


Table of Contents

Overview	3
Specifications.....	4
Physical	4
Front Panel	4
Rear Panel	4
Includes	4
Options	4
How the IR-232 Works	5
Translating IR into RS-232	5
IR-232 Native Code Structure	5
RS-232 Push/Release String Options	5
Programming Setup.....	6
Install IR ToolKit software.....	6
Create and Install COM cable	6
Set DIP Switch 2	6
IR ToolKit Overview.....	7
Properties – RS-232 Communication	7
Properties – IR-232 Operation	8
Push and Release	8
IR Input	8
Changes to Properties	8
Programming IR-232 Commands	9
Programming IR-232 Commands	10
Capturing IR Codes	10
String Formats	10
Modify IR Codes.....	10
Terminal.....	11
Terminal Commands	11
Programming for Direct Control	12
Application.....	12
Properties.....	12
Capture Codes	12
Send To IR-232	12
Monitor Operation	12
Programming for Panel Interface.....	13
Application.....	13
Properties.....	13
Capture Codes	13
Send To IR-232	13
Monitor Operation	13
Installation	14
Remote Control Connection.....	14
Cable Distance and Baud Rate.....	14
External IR Sensors	14
IR Control Port	14
IR ToolKit FAQ	15
How many commands can I create?.....	15
Why can't I see the output strings of my IR-232 in Terminal?	15
What are the double vertical bars I see in my Terminal text?	15
Limited Warranty and Disclaimer	16

Overview



IR-232

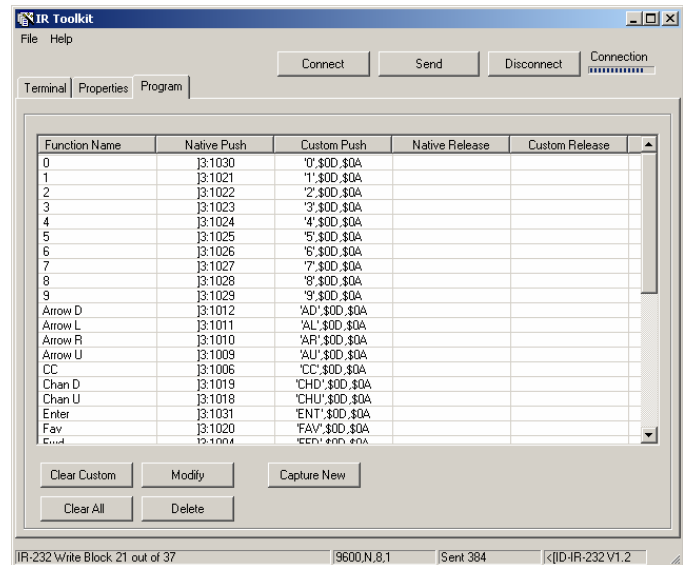

IR Toolkit

The Contemporary Research IR-232 IR to RS-232 Interface is an intelligent CR AV Tool that translates IR remote codes into RS-232 control commands. Able to automatically identify CR, JVC, Mitsubishi, NEC, Philips RC5, Samsung, Sharp, Sony, and Tivo IR control codes, the IR-232 serves a wide variety of IR control applications.

For the first time, integrators can easily combine off-the-shelf IR remotes with custom system applications. The process begins by linking the remote's IR codes to native or user-defined RS-232 commands using the included IR ToolKit software. Once a complete list of functions is created, the database can be downloaded to the IR-232, printed, and saved for later use.


To further simplify integration, the IR-232 structures continuous IR remote commands into discrete button push and release codes. When someone holds down the Volume Up button, the IR-232 doesn't send a stream of RS-232 commands, just a single push, then a release code.

The IR-232 can also act as a direct control interface for special control applications. Instead of sending the native commands, the IR-232 can be programmed to send user-defined RS-232 strings to a video projector, plasma display or other RS-232 controlled equipment.

The IR-232 is shipped complete with DC power supply and IR ToolKit software.

- Translates IR remote codes into RS-232 commands
- Automatically identifies CR, JVC, Mitsubishi, NEC, Philips RC5, Samsung, Sharp, Sony, and Tivo
- Structures continuous IR commands into discrete button push and release codes
- Builds database of native or custom RS-232 commands using IR ToolKit software
- Communicates RS-232 data at 1,200 to 115,200 baud, software programmable
- Attaches to any flat surface, swivel-mount enclosure can be aimed for best reception, painted to match application
- Receives wireless IR, wired IR emitter connections, and external IR sensors from CR, ChannelPlus, Audioplex, and Xantech
- Includes 100 mA DC power supply (domestic only), may be powered by control system, from 11.5 to 24 VDC
- Programs with included IR Toolkit Software, control database can be saved, modified, and reused
- **New!** Works with Tivo IR remotes!

Specifications

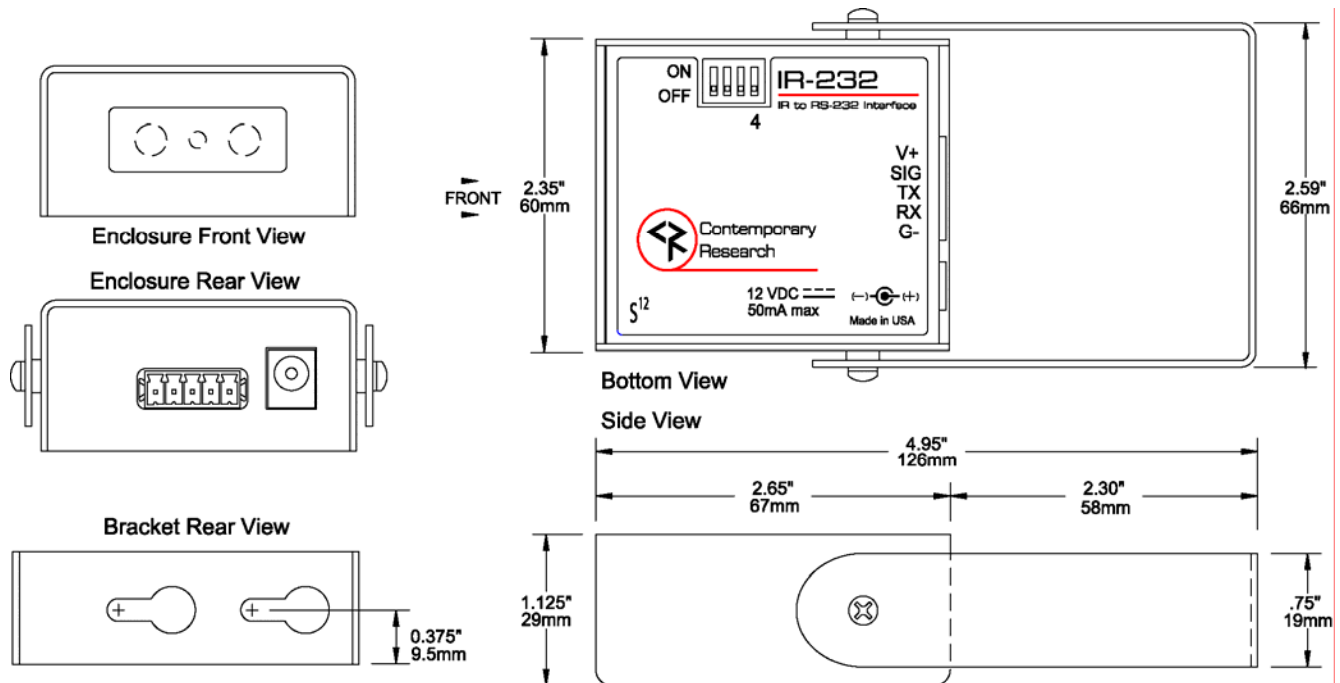

Physical

Size: 2.35" [60mm] wide x 1.125" [29mm] height x 4.95" [126mm] deep (w/bracket)
 Weight: 8 oz [226g]
 Enclosure: All aluminum with durable black powder coat paint
 Mounting: Swivel-mount receiver, attached to any flat surface

Front Panel

IR Sensors: Internal sensors receive 38 KHz and 57 KHz commands
 Automatically detects CR, JVC, Mitsubishi, NEC, Philips RC5, Samsung, Sharp, Sony, and Tivo IR codes
 IR Receive LED: Red LED flashes when receiving IR commands

Rear Panel

DIP Switch: Sets RS-232 operation parameters
 1 On = Send native RS-232 code, ignore custom commands
 2 On = Force 9600 baud rate, 8, N, 1
 Control: 5-pin captive screw terminal
 1,200 to 115,200 baud (9600 default), 8 data bits, no parity, 1 stop bit
 Power In: 2.1mm coaxial jack (center conductor positive), 50 mA maximum
 11.5 to 24 VDC, 12 VDC typical, 50 mA max (may be unregulated)

Includes

12 VDC power supply, 100 mA (North American shipments only)
 IR-232 Software CD includes IR ToolKit software

Options

CC-IRCOM IR-232 Adapter Cable, DB9 male to screw terminal
 CC-232 COM cable for programming IR-232
 IC-RC IR Remote
 IR-RXC External IR Sensor
 Compatible with ChannelPlus, Audioplex, and Xantech remote IR sensors

How the IR-232 Works

Translating IR into RS-232

	=	]3:093A32 (Push)]3*093A32 (Release)
IR Command		RS-232 String

The IR-232 translates the incoming IR command into an equivalent, or native, RS-232 command. Rather than simply repeating the RS-232 command as long as the remote sends the IR code, the IR-232 will send a single command when the button is pushed and a release code when the button is released.

IR-232 Native Code Structure

Here's how to interpret the IR-232 native codes:

- **Code format** — "]<Type><Push/Release><Hex pattern><CR>"
- **Attention Byte** — The "]" character starts the string
- **Code Type** — Manufacturer ID

ID	Manufacturer	Rev
1	Samsung	1.2
2	NEC	1.2
3	Sony	1.2
4	Sharp, CR (4, 9)	1.2
5	Philips RC5	1.2
7	JVC	1.2
8	Mitsubishi, CR (5-8)	1.2
9	Tivo	1.6

- **Push/Release Byte** — ":" = Push, "*" = Release
- **Hex Pattern** — Expressed as two or three hex byte pairs. JVC, Philips, and CR codes will use two pairs, three for Samsung and NEC, Sony uses both two and three (example code above is a Sony DVD play command).
- **Carriage Return** — a carriage return completes the statement

RS-232 Push/Release String Options

In addition to sending the native RS-232 codes for push and release, the IR-232 can provide alternate commands to meet your application requirements.


- **Native Strings** — sends the native RS-232 command
- **Custom Strings** — sends a custom string, such as a video projector input command
- **Short Strings** — sends a standard code, such as "!" for every release, common for panel interface applications
- **Nothing** — sends nothing, typical for custom control button releases

Programming Setup

Install IR ToolKit software

1. Insert the included CR Catalog CD into your computer's CR-ROM drive.
2. Click on IR ToolKit from the left-hand menu
3. Use Select Software to install:
 - a. MS Framework 1.1 (if not already installed)
 - b. IR ToolKit Software

Create and Install COM cable

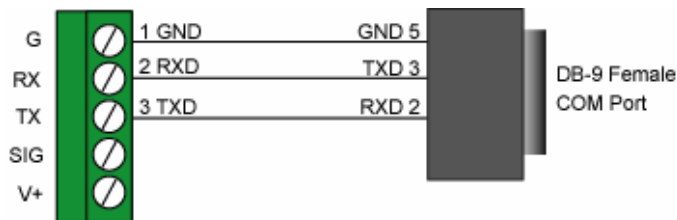

1. Create a captive-screw to COM cable, as shown above.
2. Connect between the IR-232 and your PC.
3. Connect included power supply to IR-232.

As an option, you can also purchase an IR-232 COM Adapter that provides a male DB9 to screw-terminal interface to use with your standard null-modem programming cables (DB-9 Female to Female, RX/TX swapped).

Set DIP Switch 2




Set the IR-232 DIP switch 2 to ON (Up). This locks RS-232 to default settings (9600 baud, 8 data bits, No parity, 1 stop bit) for programming. If you're using a different setting for your application, the IR-232 will use the assigned RS-232 properties when you turn Switch 2 off (down) and turn the power off, then on.

IR ToolKit Overview

There are three tabbed sections in IR ToolKit:

- **Properties** sets up computer and IR-232 COM port settings, and overall IR-232 operation.
- **Programming** creates a list of custom strings sent for push or release, and saves the database to the IR-232.
- **Terminal** displays RS-232 commands sent to and from the IR-232, selectable for Decimal, Hex or Hexadecimal formats – can also be used to send direct commands to the IR-232.


Properties – RS-232 Communication

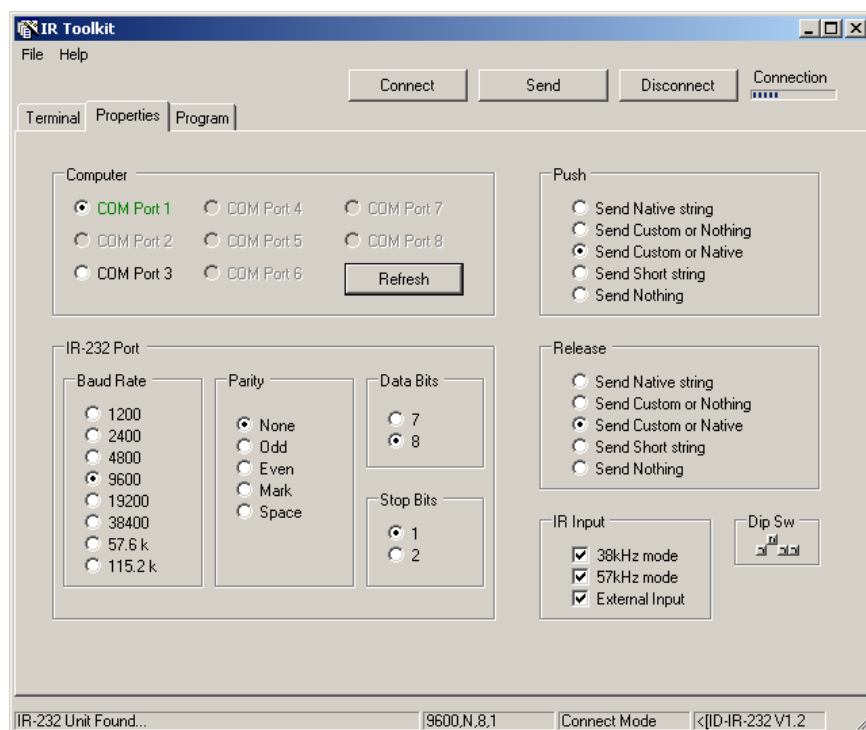

There are a few basic steps to connect and set the RS-232 parameters for the IR-232.

1. Set the IR-232 DIP switch 2 to ON (Up - fixed 9600 baud rate,8,N,1)
2. Click the **Connect** button. IR ToolKit will search for the first available COM port to connect to the IR-232.
3. If you add a USB COM port after IR ToolKit loads, press **Refresh** to re-scan the ports.
4. If you have multiple COM ports available, you can manually select the required COM port by clicking the desired **COM Port** in IR ToolKit Properties.
5. If the IR-232 isn't set to the default RS-232 settings (see step 1 above), IR ToolKit will find the unit, display the current settings, and display a flashing red indicator in the Dip Switch box on the bottom left. Set the DIP switch #2 to on (up). While IR ToolKit will automatically connect at any RS-232 setting, data load and save is more reliable at a fixed RS-232 setting.
6. The COM Port window will display the current RS-232 setting in IR-232 memory.
7. If you need a different setting for direct device control or other applications, make the change in the IR-232 Port section.
8. *As noted on page 6, IR ToolKit will upload the current database in the IR-232 when it connects.*
9. When you're done programming the IR-232, there are two ways you can return the IR-232 to the saved RS-232 parameters:
 - a. Click the **Disconnect** button, and then turn off DIP switch 2.
 - b. Turn off DIP switch 2, and then disconnect and reconnect IR-232 DC power.

Properties – IR-232 Operation

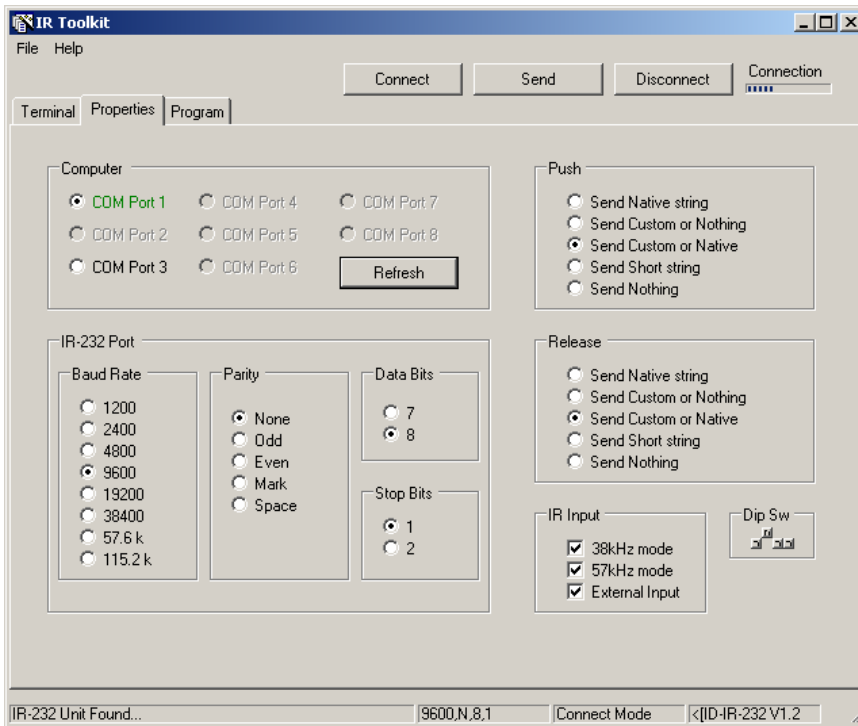

The right side of the Properties window defines the overall operation of the IR-232.

Push and Release

There are five options for the strings IR-232 sends when an IR button is pushed and released:

Option	Definition
Send Native strings	Sends interpreted IR strings
Send Custom or nothing	If no custom code is entered, send nothing
Send Custom or Native	If no custom code is entered, send native strings
Send short strings	Sends short “]:” or “]*” string for all releases
Send nothing	Sends no string at all

None of the options will affect any custom codes stored in the IR-232 memory. While you can create many push/release combinations, there are two you’ll use most often – read the upcoming “Programming For” sections for an explanation.


IR Input

You can choose whether IR commands are received from the internal 38 kHz sensor or 57 kHz sensor or the external IR input connection. You can select one or all three settings. This allows you to receive from the IR-232 internal sensor as well as an external sensor – or turn off internal sensors to receive a wired IR signal or external sensor only.

Changes to Properties

You don’t need to click Send to update IR-232 Properties. The changes you make in Properties are instantly saved in the IR-232. For example, if you turn off the 38 kHz sensor in Properties, the IR-232 instantly will stop responding to 38 kHz IR signals.

Programming IR-232 Commands

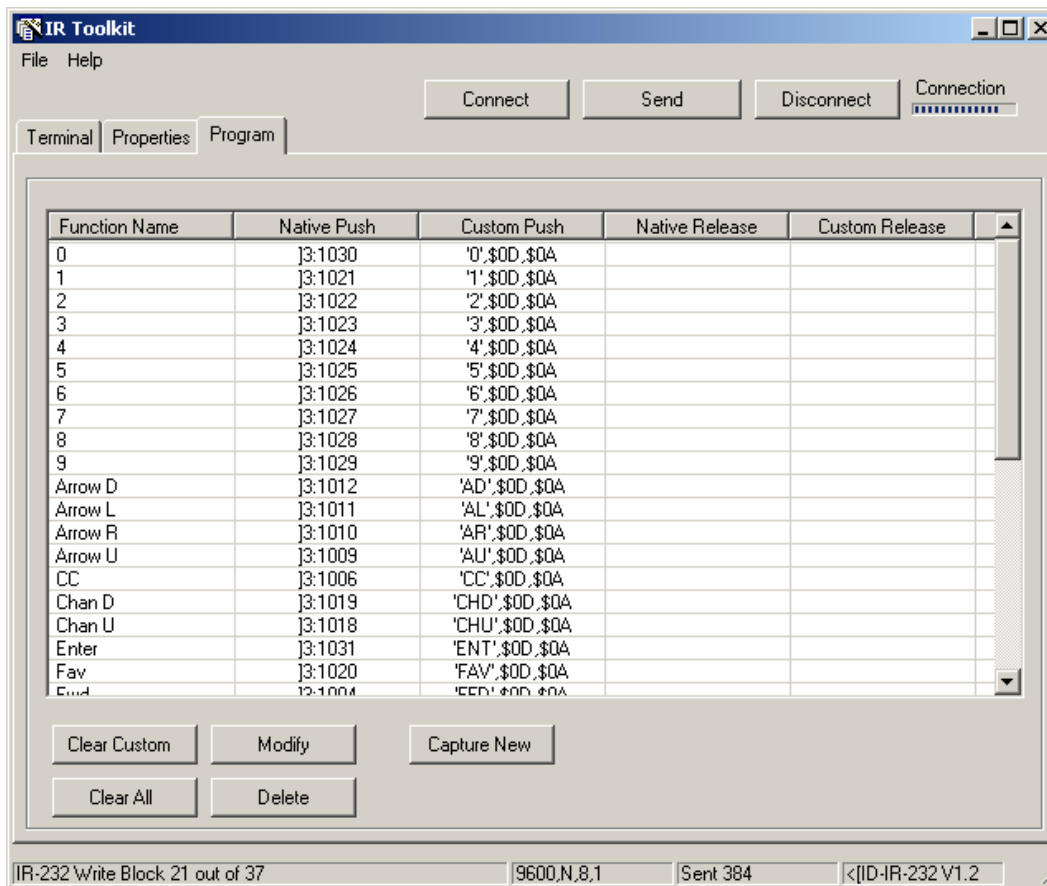

Building a control database is a simple, step by step process.

- **Capture New** captures each IR button press, translates the native RS-232 command, and allows you to enter a name, custom push string, and custom press string.
- **Modify** allows you to change the selected entry's name, custom push, and custom press.
- **Clear Custom** clears all the custom strings.
- **Clear All** clears all data.
- **Delete** deletes the selected line.
- **Send** sends the database to the IR-232, including all the assigned properties.
- **File / Save** can save the database for future applications.




ToolKit Tip

Saving and Sending

When you create the database in IR ToolKit, you can have an entry that has a Name, a Native Code, but no Custom strings for either a Press or Release. When you **Save** the file – all that information will be kept – you can Open the file later and add custom strings. When you **Send** the database to the IR-232, IR ToolKit won't include native strings that don't have a matching custom string. If there is no need to send a custom string, the IR-232 doesn't need to store the native code. That is created automatically.

Programming IR-232 Commands

Capturing IR Codes

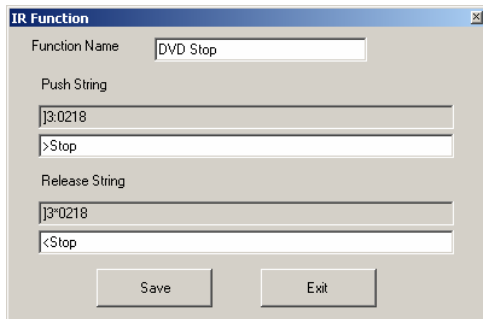


1. Push the **Capture New** button to display the Capture window.
2. Aim the IR remote at the IR-232 sensor.
3. Push a button.
4. IR ToolKit inserts the native push and release codes.
5. Enter a Function Name.
6. Add a custom code, if desired (you can do this later).

String Formats

The IR-232 supports ASCII and Hex commands, individually or in combination. The rules are as follows:

- An individual ASCII or Hex string, such as PLAY or \$FF,\$FA,\$0D, does not require any special formatting
- A combined ASCII/Hex string must start with a single quote (') or dollar sign (\$), such as 'PLAY',\$0D,\$0A or \$AO,'PLAY',\$0D – the statement PLAY',\$0D,\$0A would be expressed as literal text characters, not ASCII/Hex
- Numeric entries will be treated as text, not as integers
- The vertical line character (|) is reserved, use the hex equivalent (\$7C), if needed


Modify IR Codes

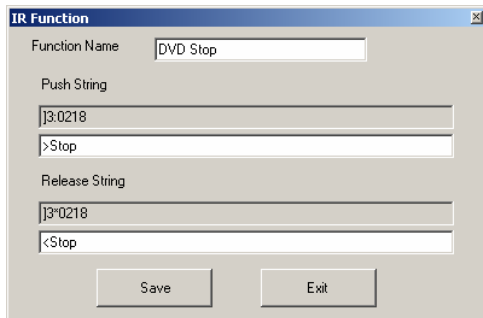

You don't have to enter the custom codes during capture – you can add them at any time using the **Modify** tool (make sure you **Save** the database). Remember, you don't have to create a custom code for every release. In the default operating mode, the IR-232 won't send any codes if nothing's stored in the **Custom** space. You could create custom release codes for continuous-type functions such as Volume and Channel Up/Down, and send no release codes for other commands.

1. Click a row to highlight the function you want to change
2. Push the **Modify** button to display the Modify window.
3. Add or change the Function Name or custom codes.
4. Save the new file when you're done.

Terminal

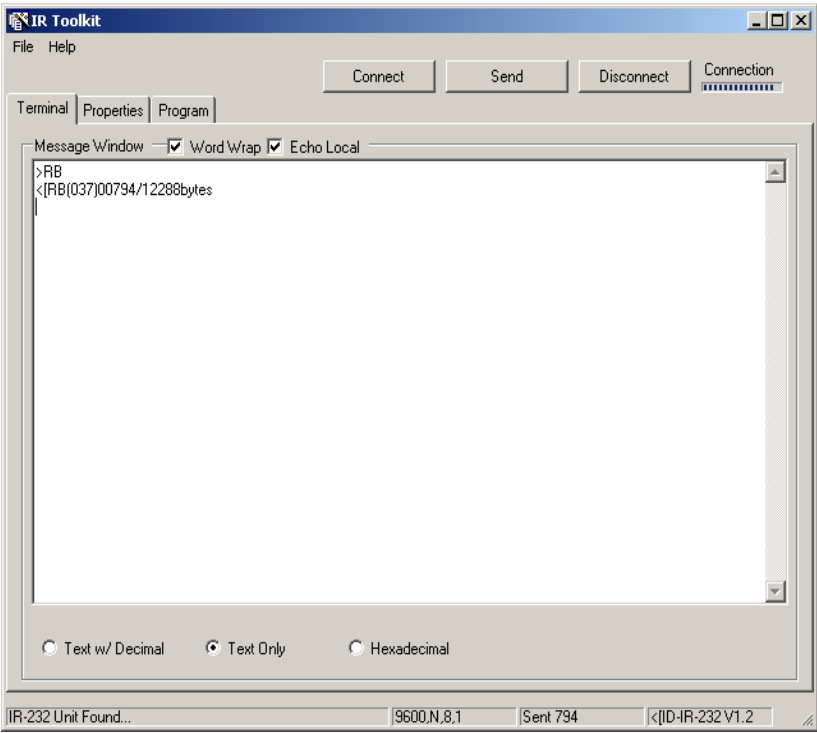

The terminal window gives you the ability to watch the RS-232 codes actually sent from the IR-232, with the ability to view strings in ASCII text with Decimal (shown above), Text only, and Hexadecimal.

- You can right-click the Terminal window to select, cut and paste the text.
- You can click the Echo Local box and enter commands directly. For example, enter “>ID” into Terminal, then Enter – the IR-232 will display its latest software version.
- Disconnect IR ToolKit to monitor RS-232 control strings.

If you are capturing native codes for direct application in your control system code, the best approach is to use the Text with Decimal setting, so you can copy the code plus the carriage return.



ToolKit Tip

Capturing Codes from Terminal

You can cut and paste native codes for direct insertion in your control system code. Typically, Crestron programmers will capture in Text with Decimal mode (with carriage return), AMX code writers prefer Text Only, without the return characters.

Terminal Commands

You can also send commands directly to the IR-232 through the Terminal window in Connect mode. Click **Echo Local** to view the commands you type.

>ID	Identify	Displays current firmware version Example: ID-IR-232 V1.2
>RB	Remaining Memory Blocks	Displays memory status Example: RB(037) 00794/12288bytes (total blocks used) Bytes used/Bytes available
>RR	Press and release settings	Displays Properties values for press and release options 0 = Send Native stings 1 = Send Custom or nothing 2 = Send Custom or Native 3 = Send short strings 4 = Send nothing

Programming for Direct Control

Application

You are using the IR-232 to directly control a projector, plasma or other device, translating incoming IR commands into custom control strings, and using no release strings. If you use 10 characters for each command name and custom RS-232 string, you can store about 250 commands.

Properties

Open the Properties window and set the IR-232 **Push** to option 2, Send Custom Code, and the **Release** to Send Nothing.

Capture Codes

Start capturing IR commands, giving each a name and custom RS-232 control command. You can also just capture the IR codes and assign a name, then fill in the custom commands later on.

Send To IR-232

Clicking the **Send to IR-232** button will send the database into IR-232 memory. The Properties window will define how the IR-232 uses the information.

Monitor Operation

Push buttons on the IR Remote and check the RS-232 commands in the Monitor window against the ones you've created.



ToolKit Tip

Cloning IR-232 Applications

If you save the IR-232 database you've created, you can "clone" other IR-232 units for future installations. The process is very simple.

- **Connect** IR ToolKit to the new IR-232 unit
- **Open** the saved application database
- **Send** the database to the IR-232

Programming for Panel Interface

Application

You are using the IR-232 to integrate an IR wireless remote into a custom control system. The best approach is to use the native Pushes and the Short String Release ("!*"). The Short String Release doesn't use any memory, and you can take advantage of the Release code in programming to ramp volume or continuously change channels when a button is pushed and held.

Assuming you assign a 10-character name to each IR command to document operation, you can create about 500 commands. If you don't assign a name, and simply use the IR-232 to generate native RS-232 commands and default releases, you can integrate an infinite number of IR to RS-232 commands.

By using the Native Code approach, you maximize the memory of the IR-232, and you can easily re-use your programming for other applications. If you setup your system to operate with Sony commands, any remote that can send Sony-format commands will work with your code.

Properties

Open the Properties window and set the IR-232 **Push** to option 1, Send Native Code, and the **Release** to Send Default Code ("!*").

Capture Codes

Start capturing IR commands, giving each a name. When you're done, you can print the list as a guide to programming the system.

Send To IR-232

Clicking the **Send to IR-232** button will send the database into IR-232 memory. The Properties window will define how the IR-232 uses the information.

Monitor Operation

Push buttons on the IR Remote and check operation in the Monitor window.




ToolKit Tip

Cloning IR-232 Applications

If you save the IR-232 database you've created, you can "clone" other IR-232 units for future installations. The process is very simple.

- **Connect** IR ToolKit to the new IR-232 unit
- **Open** the saved application database
- **Send** the database to the IR-232

Installation

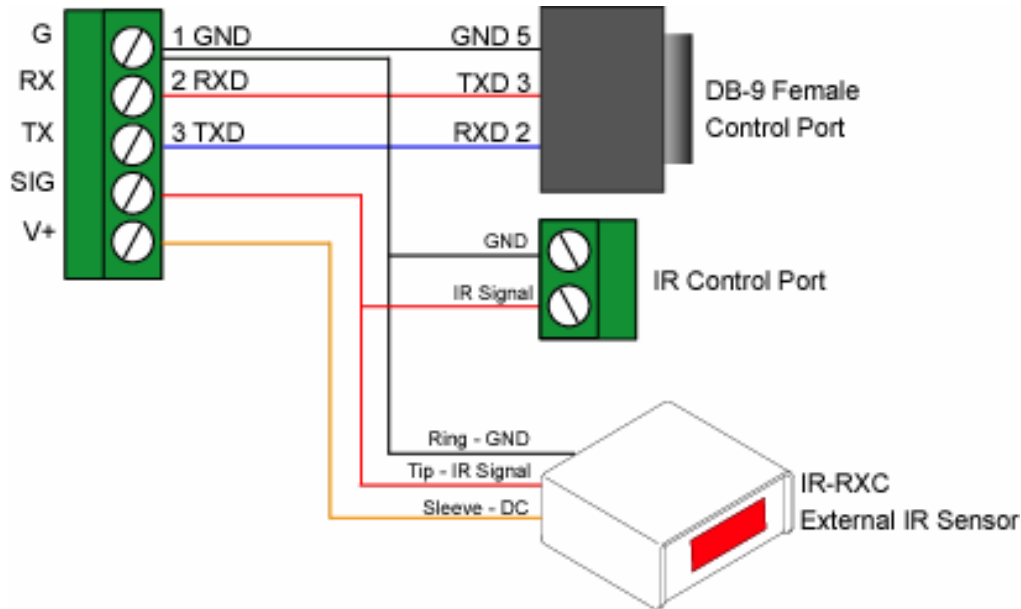

Remote Control Connection

1. Wire appropriate RS-232 cable to the IR-232 captive screw terminal.
2. Make sure the RS-232 parameters match the control system port or RS-232 device.
3. Use a baud rate that can be effectively transmitted over the type and distance of wiring.

Cable Distance and Baud Rate

The baud rate for your RS-232 communication must decrease as cable length increases. Assuming use of good-quality shielded twisted-pair cable, the typical distances for RS-232 transmission are:

Baud	Feet
2,400	100
9,600	50
19,200	25
38,400	20
115,200	10

External IR Sensors

As shown above, you can also connect external IR sensors, including the IR-RXC or Xantech IR sensors. Both the IR-232 and IR-RXC include 38 KHz sensors for standard IR remotes and 57 KHz sensors for CR high-frequency IR commands.

IR Control Port

The IR-RXC can also accept a direct wired IR connection from an IR control port. The port should be set to generate standard IR, not IR serial. Some types of IR serial codes, such as Sony Serial, reverse the polarity of the signal.

How many commands can I create?

The IR-232 has 12.2 K of user memory. Calculating an average of 10 characters for the command name, plus 32 bytes for the string and overhead – the typical application could use about 290 commands. This also assumes that, instead of a custom release string for every command, you're using the "short release string" option (short "]" or "]"* string for all releases) or no release strings, except for functions like volume or channel up/down.

Why can't I see the output strings of my IR-232 in Terminal?

You're still in Connect mode. IR ToolKit is linked directly with the IR-232 for IR code capture, Properties, and database setup.

You need to Disconnect the IR-232 in IR ToolKit (click the Disconnect button) to exit the real-time programming mode. If you're using RS-232 different than the default settings (9600 baud rate,8,N,1), turn DIP switch 2 Off.

When you disconnect, you're still "connected" to monitor the IR-232 output, but not in real-time programming mode.

What are the double vertical bars I see in my Terminal text?

If a command has a linefeed before a carriage return (\$0A, \$0D), it's an unprintable character in Terminal text - so Terminal displays a double vertical bar. The command is correct in hex mode, it just can't be shown in text.

Using the normal (\$0D, \$0A) return/linefeed convention displays properly.

I connected with my IR-232 - why did some of my Native Codes go away in the database?

When you create the database in IR ToolKit, you can have an entry that has a Name, a Native Code, but no Custom strings for either a Press or Release. When you Save the file – all that information will be kept.

However, the IR-232 doesn't need to know the native code if there is no corresponding custom string - it generates native codes automatically. So if there is no custom string, IR ToolKit doesn't send the native code information to the IR-232. That saves memory.

When you connect with an IR-232, IR ToolKit loads the control database from IR-232 memory, so any native codes not assigned a custom string will be gone.

The moral is - you should save your IR ToolKit files if you intend on adding custom commands at a later date.

Limited Warranty and Disclaimer

Contemporary Research Corporation (CR) warrants this product to be free from defects in material and workmanship under normal use for a period of two years from the date of purchase from CR. Should such a defect occur CR will repair or replace, at their option, the defective product at no cost for parts or labor.

This warranty extends to product purchased directly from CR or an Authorized CR Dealer. Consumers should inquire from selling dealer as to the nature and extent of the dealer's warranty, if any.

All warranty claims must be shipped pre-paid to the factory. Call or fax to obtain a Return Material Authorization (RMA) number.

CR is not liable for any damages caused by any of its products or for the failure of any products to perform, including any lost profits, lost savings, incidental damages, or consequential damages. CR is not responsible for any claim made by a third party or made for you by a third party. This limitation of liability applies whether damages are sought, or a claim is made, under this warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if CR or an authorized representative of CR has been advised of the possibility of any such damages.

Some states do not allow a limitation of how long an implied warranty lasts. Some states do not allow the limitation or exclusion of incidental or consequential damages for consumer products. In such states, the limitation or exclusion of the Limited Warranty may not apply to you. This Limited Warranty gives you specific legal rights. You may also have other rights that may vary from state to state. You are advised to consult applicable state laws for a full determination of your rights.

Except as expressly set forth in this Limited Warranty, CR makes no other warranties, express or implied, including any implied warranties of merchantability or fitness for a particular purpose. CR expressly disclaims all warranties not stated in this Limited Warranty. Any implied warranties that may be imposed by law are limited to the terms of this Limited Warranty.